




















Dimensions:	265 x 162 x 30 mm	
Material:	Polyethylene HDPE	
Color:	White	
Weight : (liquid + plate)	1,1 kg	

PERFORMANCES

Liquid type:	COOL 0°C	
Refrigerating capacity:	304 kJ or 73 kcal	
Latent heat at melting point:	339 kJ/kg	
Freezing T°C:	-18°C / 24h	
T°C target :	0°C to +12°C (*)	
Cap color:	White	

(*) Thermal data as an indication, do not hesitate to consult us to find the best device for your cold chain needs.

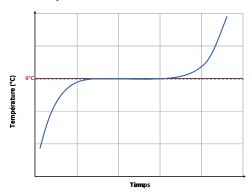

PACKAGING

Nb of pieces per carton :	20	
Nb of pieces per pallet :	800	
Carton dimension: 540 x 340 x 1		
Pallet dimension :	1200 x 1000 x 1670 mm	
Carton weight:	22,65 kg	
Pallet weight :	931,4 kg	

The indicated weight values are variable to +/- 5%.

0°C	-3°C	-12°C	-16°C	-18°C
-21°C	-23°C	-26°C	-30°C	
+5°C	+18°C	+22°C	+37°C	+65°C

Item: 350014-



ERGONOMICS







Ultrasonic welded cap

Anchor points

Reinforced corners





ADVANTAGES

- . High energy performance in cold returned,
- . Perfect sealing by ultrasonic welding,
- . High density polyethylene material suitable for food contact,
- . Ideal for fresh or sensitive fresh products,
- . White color plate for visible cleanliness,
- . Gastronorm format GN1/4,
- . Robust thanks to reinforced corners and anchor points,
- . Dimensions adapted to our range of EPP insulated boxes,
- . Indication of the eutexia temperature engraved on colored cap.

CUSTOMIZED

STUDY

HANDLING

Before each use, you must freeze the eutectic liquid contained in the plate until it is solid completely. For this, put the eutectic plate for at least 24 hours in a freezer whether the temperature should be at least 6°C below the temperature of the eutectic mixture indicated on the colored cap.

To get a good performance, the eutectic liquid must be completely solid before use.

Because of the conception of the plate, we advice to freeze the plate in an horizontal position, if possible, in order to get an homogeneous repartition of the liquid in all the volume of the plate. In that way, the mechanical pressure made by the solidification of the liquid will be homogeneous in all the plate but also the optimization of the heat exchange over your products to cool.

Do not expose eutectic plates to extreme temperatures above + 50 °C or above -45 °C. Once frozen, the eutectic plates are sensitive to shocks.

© 2017 - This document including texts and graphics are the property of COOL sarl Any reproduction, copy or diffusion are prohibited without the written consent of COOL sarl






























Dimensions:	265 x 162 x 30 mm	
Material:	Polyethylene HDPE	
Color:	White	
Weight : (liquid + plate)	1,11 kg	

PERFORMANCES

Liquid type:	COOL -3°C
Refrigerating capacity:	280 kJ or 67 kcal
Latent heat at melting point:	308 kJ/kg
Freezing T°C:	-18°C / 24h
T°C target :	0°C to +6°C (*)
Cap color:	Green

(*) Thermal data as an indication, do not hesitate to consult us to find the best device for your cold chain needs.

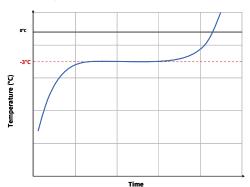

PACKAGING

Nb of pieces per carton :	20
Nb of pieces per pallet :	800
Carton dimension :	540 x 340 x 190 mm
Pallet dimension :	1200 x 1000 x 1670 mm
Carton weight:	22,65 kg
Pallet weight :	929,1 kg
The indicated weight values are vari	able to +/- 5%.

AVAILABLE EUTECTIC LIQUIDS

COOL sarl

0°C	-3°C	-12°C	-16°C	-18°C
-21°C	-23°C	-26°C	-30°C	
+5°C	+18°C	+22°C	+37°C	+65°C

Item: 350014-3



ERGONOMICS







Ultrasonic welded cap

Anchor points

Reinforced corners





ADVANTAGES

- . High energy performance in cold returned,
- . Perfect sealing by ultrasonic welding,
- . High density polyethylene material suitable for food contact,
- . Ideal for fresh or sensitive fresh products,
- . White color plate for visible cleanliness,
- . Gastronorm format GN1/4,
- . Robust thanks to reinforced corners and anchor points,
- . Dimensions adapted to our range of EPP insulated boxes,
- . Indication of the eutexia temperature engraved on colored cap.

CUSTOMIZED

STUDY

HANDLING

Before each use, you must freeze the eutectic liquid contained in the plate until it is solid completely. For this, put the eutectic plate for at least 24 hours in a freezer whether the temperature should be at least 6°C below the temperature of the eutectic mixture indicated on the colored cap.

To get a good performance, the eutectic liquid must be completely solid before use.

Because of the conception of the plate, we advice to freeze the plate in an horizontal position, if possible, in order to get an homogeneous repartition of the liquid in all the volume of the plate. In that way, the mechanical pressure made by the solidification of the liquid will be homogeneous in all the plate.

Do not expose eutectic plates to extreme temperatures above + 50 °C or above -45 °C. Once frozen, the eutectic plates are sensitive to shocks.

© 2017 - This document including texts and graphics are the property of COOL sarl. Any reproduction, copy or diffusion are prohibited without the written consent of COOL sarl.






























Dimensions:	265 x 162 x 30 mm	
Material:	Polyethylene HDPE	
Color:	White	
Weight : (liquid + plate)	1,18 kg	

PERFORMANCES

Liquid type:	COOL -12°C
Refrigerating capacity:	270 kJ or 64 kcal
Latent heat at melting point:	276 kJ/kg
Freezing T°C:	-18°C / 24h
T°C target :	0°C to +4°C (*)
Cap color:	Blue

(*) Thermal data as an indication, do not hesitate to consult us to find the best device for your cold chain needs.

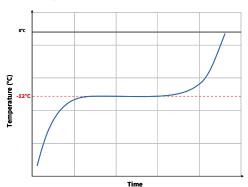

PACKAGING

Nb of pieces per carton :	20
Nb of pieces per pallet :	800
Carton dimension :	540 x 340 x 190 mm
Pallet dimension :	1200 x 1000 x 1670 mm
Carton weight:	22,9 kg
Pallet weight :	940,25 kg
The indicated weight values are vari	able to +/- 5%.

AVAILABLE EUTECTIC LIQUIDS

0°C	-3°C	-12°C	-16°C	-18°C
-21°C	-23°C	-26°C	-30°C	
+5°C	+18°C	+22°C	+37°C	+65°C

Item: 350014-12



ERGONOMICS







Ultrasonic welded cap

Anchor points

Reinforced corners





ADVANTAGES

- . High energy performance in cold returned,
- Perfect sealing by ultrasonic welding,
- . High density polyethylene material suitable for food contact,
- . Ideal for fresh or sensitive fresh products,
- White color plate for visible cleanliness,
- . Gastronorm format GN1/4,
- . Robust thanks to reinforced corners and anchor points,
- . Dimensions adapted to our range of EPP insulated boxes,
- . Indication of the eutexia temperature engraved on colored cap.

CUSTOMIZED

STUDY

HANDLING

Before each use, you must freeze the eutectic liquid contained in the plate until it is solid completely. For this, put the eutectic plate for at least 24 hours in a freezer whether the temperature should be at least 6°C below the temperature of the eutectic mixture indicated on the colored cap.

To get a good performance, the eutectic liquid must be completely solid before use.

Because of the conception of the plate, we advice to freeze the plate in an horizontal position, if possible, in order to get an homogeneous repartition of the liquid in all the volume of the plate. In that way, the mechanical pressure made by the solidification of the liquid will be homogeneous in all the plate.

Do not expose eutectic plates to extreme temperatures above + 50 °C or above -45 °C. Once frozen, the eutectic plates are sensitive to shocks.






























Dimensions:	265 x 162 x 30 mm	
Material:	Polyethylene HDPE	
Color:	White	
Weight : (liquid + plate)	1,15 kg	

PERFORMANCES

Liquid type:	COOL -16°C
Refrigerating capacity:	295 kJ or 71 kcal
Latent heat at melting point:	312 kJ/kg
Freezing T°C:	-22°C / 24h
T°C target :	-22°C to -15°C (*)
Cap color:	Red

(*) Thermal data as an indication, do not hesitate to consult us to find the best device for your cold chain needs.

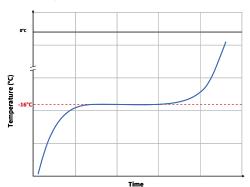

PACKAGING

Nb of pieces per carton :	20
Nb of pieces per pallet :	800
Carton dimension :	540 x 340 x 190 mm
Pallet dimension :	1200 x 1000 x 1670 mm
Carton weight:	23,65 kg
Pallet weight :	970,35 kg
The indicated weight values are variable	e to +/- 5%.

AVAILABLE EUTECTIC LIQUIDS

COOL sarl

478 avenue Marie Curie

0°C	-3°C	-12°C	-16°C	-18°C
-21°C	-23°C	-26°C	-30°C	
+5°C	+18°C	+22°C	+37°C	+65°C

Item: 350014-16



ERGONOMICS







Ultrasonic welded cap

Anchor points

Reinforced corners





ADVANTAGES

- . High energy performance in cold returned,
- . Perfect sealing by ultrasonic welding,
- . High density polyethylene material suitable for food contact,
- . Ideal for frozen products,
- . White color plate for visible cleanliness,
- . Gastronorm format GN1/4,
- . Robust thanks to reinforced corners and anchor points,
- . Dimensions adapted to our range of EPP insulated boxes,
- . Indication of the eutexia temperature engraved on colored cap.

HANDLING

Before each use, you must freeze the eutectic liquid contained in the plate until it is solid completely. For this, put the eutectic plate for at least 24 hours in a freezer whether the temperature should be at least 6°C below the temperature of the eutectic mixture indicated on the colored cap.

To get a good performance, the eutectic liquid must be completely solid before use.

Because of the conception of the plate, we advice to freeze the plate in an horizontal position, if possible, in order to get an homogeneous repartition of the liquid in all the volume of the plate. In that way, the mechanical pressure made by the solidification of the liquid will be homogeneous in all the plate.

Do not expose eutectic plates to extreme temperatures above + 50 °C or above -45 °C. Once frozen, the eutectic plates are sensitive to shocks.

© 2017 - This document including texts and graphics are the property of COOL sar Any reproduction, copy or diffusion are prohibited without the written consent of COOL sar
































Dimensions:	265 x 162 x 30 mm		
Material:	Polyethylene HDPE		
Color:	White		
Weight : (iiquid + plate)	1,26 kg		

PERFORMANCES

Liquid type:	COOL -21°C
Refrigerating capacity:	251 kJ or 60 kcal
Latent heat at melting point:	238 kJ/kg
Freezing T°C:	-27°C / 24h
T°C target :	-27°C to -21°C (*)
Cap color:	Yellow

(*) Thermal data as an indication, do not hesitate to consult us to find the best device for your cold chain needs.

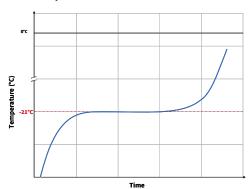

PACKAGING

Nb of pieces per carton :	20
Nb of pieces per pallet :	800
Carton dimension :	540 x 340 x 190 mm
Pallet dimension :	1200 x 1000 x 1670 mm
Carton weight:	25,8 kg
Pallet weight :	1 055,95 kg
The indicated weight values are variable	e to +/- 5%.

AVAILABLE EUTECTIC LIQUIDS

COOL sarl

0°C	-3°C	-12°C	-16°C	-18°C
-21°C	-23°C	-26°C	-30°C	
+5°C	+18°C	+22°C	+37°C	+65°C

Item: 350014-21



ERGONOMICS







Ultrasonic welded cap

Anchor points

Reinforced corners





ADVANTAGES

- . High energy performance in cold returned,
- . Perfect sealing by ultrasonic welding,
- . High density polyethylene material suitable for food contact,
- . Ideal for frozen products,
- . White color plate for visible cleanliness,
- . Gastronorm format GN1/4,
- . Robust thanks to reinforced corners and anchor points,
- . Dimensions adapted to our range of EPP insulated boxes,
- . Indication of the eutexia temperature engraved on colored cap.

HANDLING

Before each use, you must freeze the eutectic liquid contained in the plate until it is solid completely. For this, put the eutectic plate for at least 24 hours in a freezer whether the temperature should be at least 6°C below the temperature of the eutectic mixture indicated on the cap.

To get a good performance, the eutectic liquid must be completely solid before use.

Because of the conception of the plate, we advice to freeze the plate in an horizontal position, if possible, in order to get an homogeneous repartition of the liquid in all the volume of the plate. In that way, the mechanical pressure made by the solidification of the liquid will be homogeneous in all the plate.

Do not expose eutectic plates to extreme temperatures above + 50 °C or above -45 °C. Once frozen, the eutectic plates are sensitive to shocks.











